




## Hanger Bolts

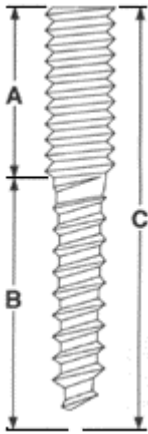

Size		A	B	C	D
		Standard Length	Machine Length	Lag Thread Length	Center Space
<b>10-24</b>	x1-1/2	1-1/2	5/8	7/8	--
	x1-3/4	1-3/4	3/4	1	--
	x2	2	1	1	--
	x2-1/2	2-1/2	1	1-1/2	--
	x3	3	1-1/2	1-1/2	--
<b>1/4-20</b>	x1-1/2	1-1/2	1/2	3/4	--
	x1-3/4	1-3/4	3/4	1	--
	x2	2	1	1	--
	x2-1/4	2-1/4	1	1-1/4	--
	x2-1/2	2-1/2	1	1-1/2	--
	x3	3	1-1/2	1-1/2	--
	x3-1/2	3-1/2	1-1/2	2	--
	x4	4	2	2	--
	x4-1/2	4-1/2	1-1/8	3	3/8
	x5	5	1-1/8	3	7/8
	x6	6	1-1/4	3	1-3/4
<b>5/16-18</b>	x1-1/2	1-1/2	5/8	7/8	--
	x1-3/4	1-3/4	3/4	1	--
	x2	2	1	1	--
	x2-1/4	2-1/4	1	1-1/4	--
	x2-1/2	2-1/2	1	1-1/2	--
	x2-3/4	2-3/4	1-1/4	1-1/2	--
	x3	3	1-1/2	1-1/2	--
	x3-1/2	3-1/2	1-1/2	2	--
	x4	4	2	2	--
	x4-1/2	4-1/2	1-1/8	2	7/8
	x5	5	1-1/8	3	7/8
	x5-1/2	5-1/2	1-1/8	3	1-3/8
x6	6	1-1/4	3	1-3/4	
<b>3/8-16</b>	x2	2	1	1	--
	x2-1/2	2-1/2	1	1-1/2	--
	x3	3	1-1/2	1-1/2	--
	x3-1/2	3-1/2	1-1/2	2	--
	x4	4	2	2	--
	x4-1/2	4-1/2	1-1/8	3	3/8
	x5	5	1-1/8	3	3/8
	x5-1/2	5-1/2	1-1/8	3	1-3/8
	x6	6	1-1/4	3	1-3/8
	x8	8	2-1/2	3	2-1/2
x10	10	2-1/2	3	4-1/2	

4300 East Miraloma Avenue, Anaheim CA 92807

Tel 714-854-1715 Fax 714-854-1716

[www.cfi1.com](http://www.cfi1.com)